
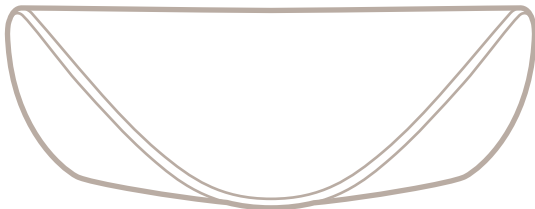



# Sine

assembly guide

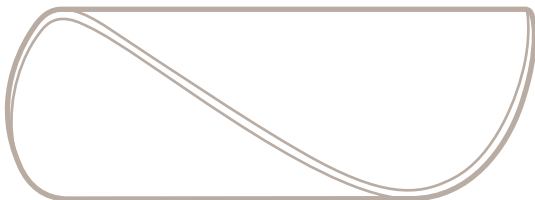


UIMAGE


# IN THE BOX

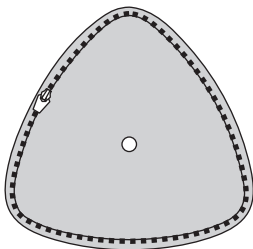


Top felt

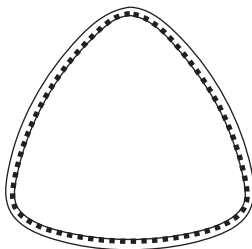

Bottom felt

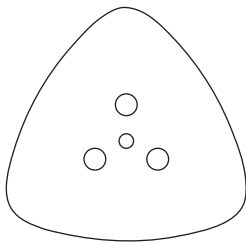

Top PC

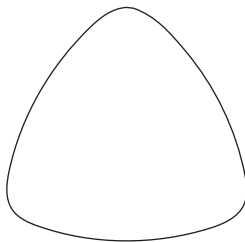



Bottom PC




Find assembly videos by using the QR code  
or by going online at our website **[umage.com/instructions](https://umage.com/instructions)**

- 1 Zip the zipper.

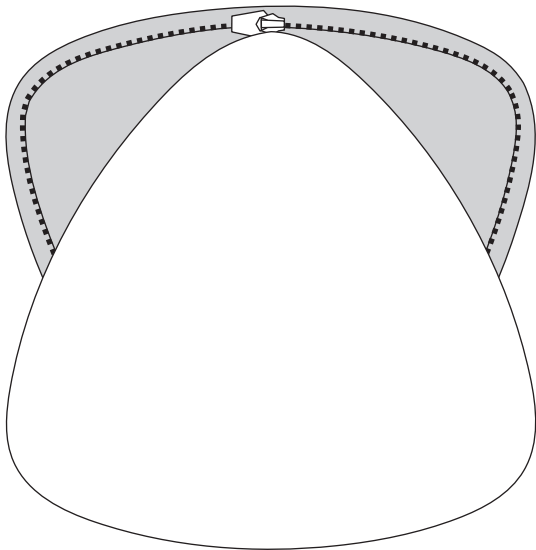


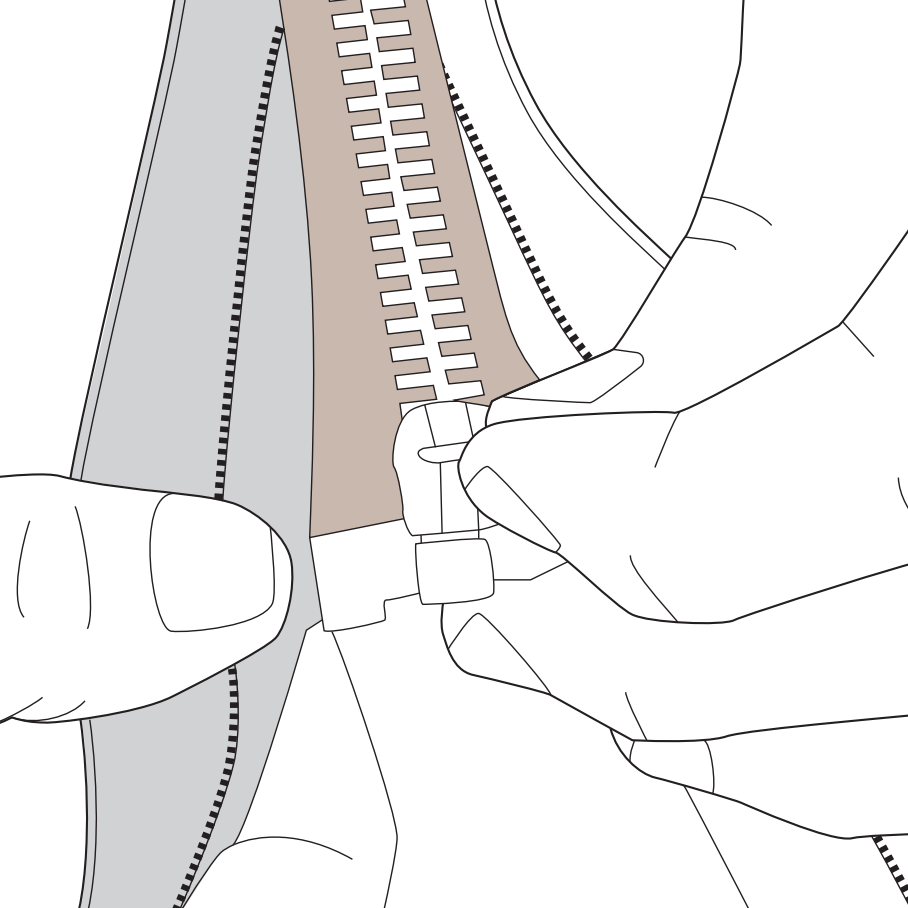


2 Zip two-thirds of the zipper.

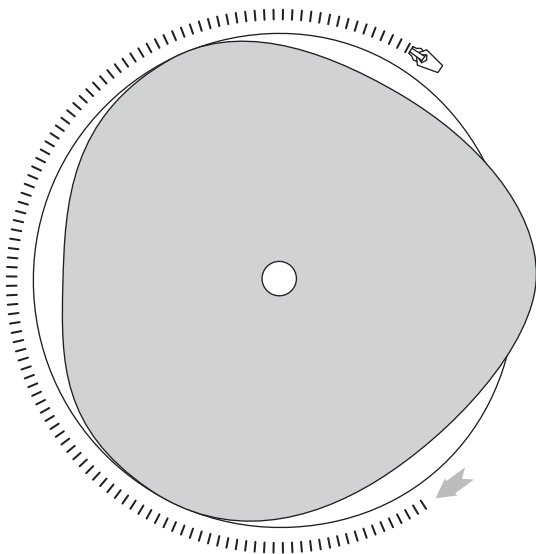


- 3 Bend the top PC part and insert it. Align it with the top felt part.

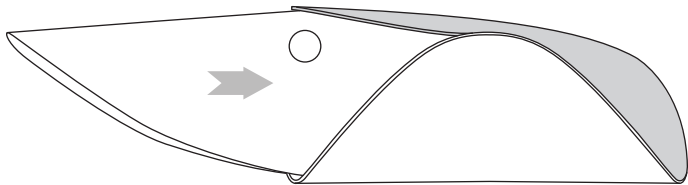



- 4 Bend the bottom PC part and insert it. Align it with the bottom felt part.

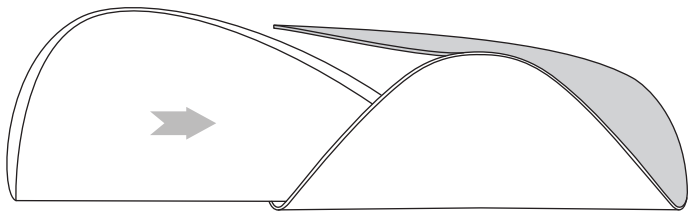

5 Assemble with cordset and light bulb.

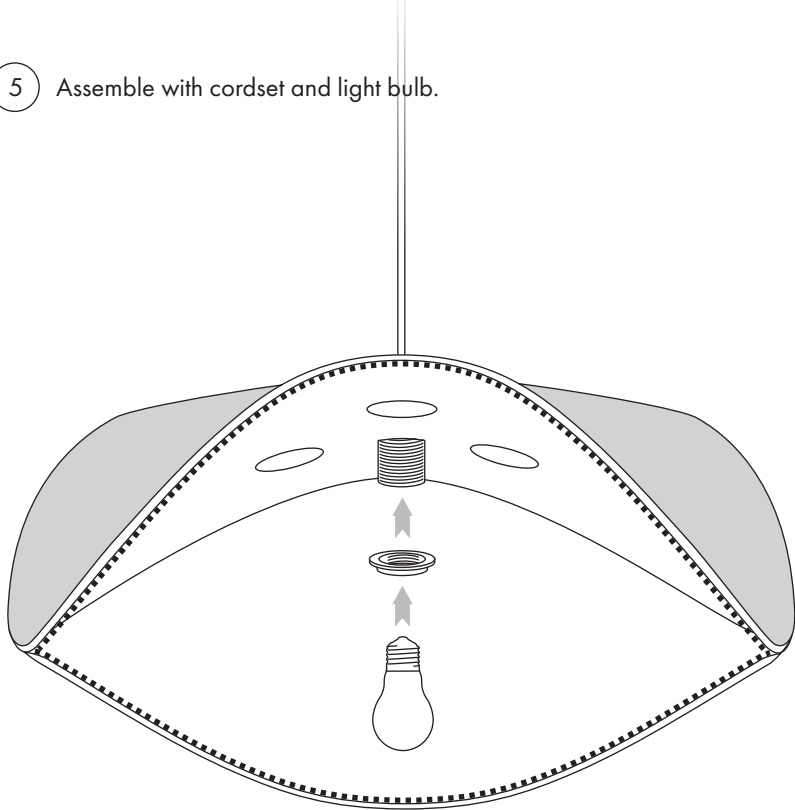


- 6 Zip all the way around and make sure the zipper is overlapping itself.

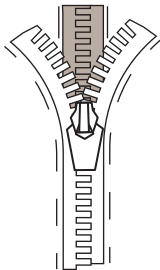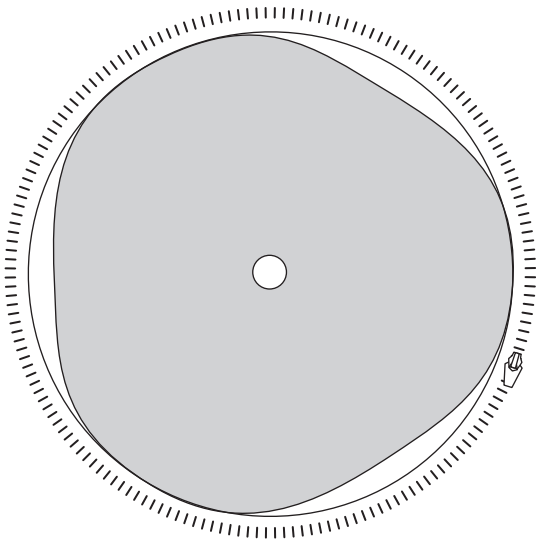



- 7 Adjust the edges around the shade to avoid an uneven look

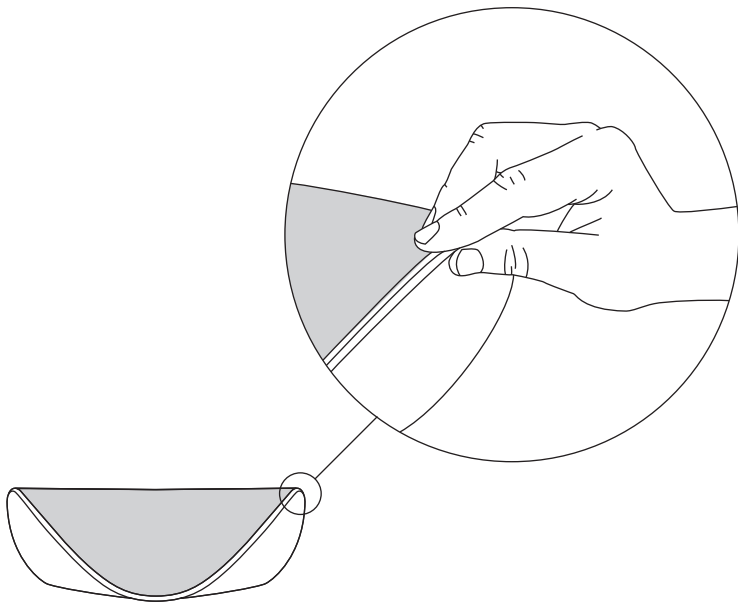

















FOLLOW US ON SOCIAL MEDIA



@umagedesign



UIMAGE

umage.com